

This document provides additional assistance with wiring your Extron IP Link enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific Extron IP Link enabled product or the controlled device manufacturer supplied documentation.

Device Specifications:

Device Type: Display
Manufacturer: ViewSonic
Firmware Version: N/A
Model(s): VT2755LED

Version History:

Driver Version	Date	IP Link Compiler	GC Version	Notes
1	9/9/2013	1.6.0	3.5.1	Initial version.

Driver Notes:

MLC60 Series commands are set to device ID 01.
Driver has been optimized for volume.
No status when in Broadcast.

IP Link® Device Interface Communication Sheet

Control Commands & States:

Audio Mute	On	Off	
Executive Mode 1	Power Lock On	Power Lock Off	
Executive Mode 2	Button Lock On	Button Lock Off	
Executive Mode 3	Menu Lock On	Menu Lock Off	
ID Select	1-98	Broadcast	
Input	TV	AV	S-Video
	Component (YPbPr)	HDMI	DVI
	VGA		
IR Remote	Enable	Disable	
Keypad	0-9		
Menu Navigation	Up	Down	Left
	Right	Enter	Input
	Menu		
Power Control	On	Off	
Volume (Discrete)	0 to 100 in steps of 1		

**IP Link® Device Interface
Communication Sheet**

Status Available:

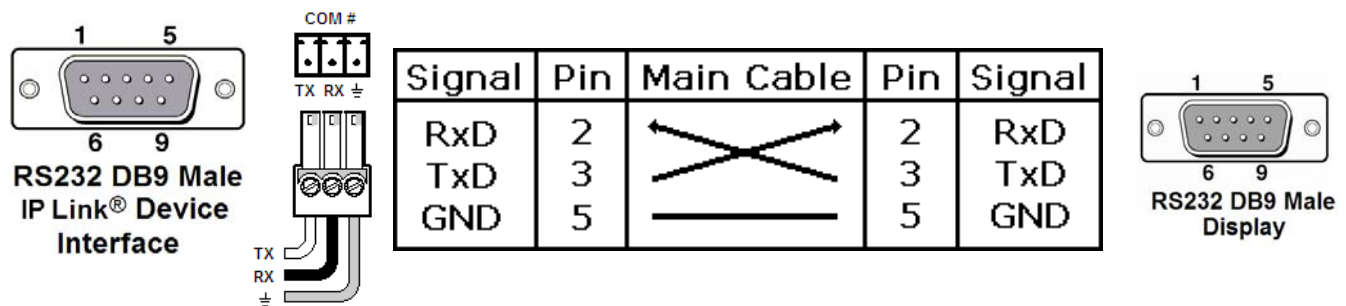
Audio Mute	On	Off
Connection Status	Connected	Disconnected
Executive Mode 1	Power Lock On	Power Lock Off
Executive Mode 2	Button Lock On	Button Lock Off
Executive Mode 3	Menu Lock On	Menu Lock Off
Input	TV Component (YPbPr) VGA	AV HDMI S-Video DVI
IR Remote	Enable	Disable
Power Control	On	Off
Volume (Discrete)	0 to 100 in steps of 1	

**IP Link® Device Interface
Communication Sheet*****MLC60 Series Supported Commands:***

Audio Mute	On	Off
Executive Mode 1	Power Lock On	Power Lock Off
Executive Mode 2	Button Lock On	Button Lock Off
Executive Mode 3	Menu Lock On	Menu Lock Off
Input	TV Component (YPbPr) VGA	AV HDMI S-Video DVI
IR Remote	Enable	Disable
Keypad	0-9	
Menu Navigation	Up Right Menu	Down Enter Left Input
Power Control	On	Off
Volume (Discrete)	0 to 100 in steps of 1	

Cable and Adapter Requirements:

F/F Null Serial RS232 Cable.

Notes for the Device:**Serial communication:****Port Type:** RS-232**Baud Rate:** 9600**Data Bits:** 8**Parity:** None**Stop Bits:** 1**Flow Control:** None**Pin Assignments Diagram:**

Note: Captive screw connector may also be used as a serial connection.

General Notes: